36 Ignition Drive 1

Tacho drive enligt Jerry

Cylinder 1+4

	9A4 ECU		Issue 01
Pin No.	Description	То	Comment
	1 Injector Drive D	lnj 2 02	Cylinder 2
	2 Coolant Temp Signal	CT 01	
	3 Air Temp Signal 4 N/C	AT 02	
	5 0V Analogue	TPS 03	
	0V Analogue	Baro C	
	0V Analogue	AT 01	
	0V Analogue	CT 02	
	0V Analogue	LAMBDA BROWN/BLUE	
	6 Ground	Ground	Power Ground
	7 Ground	Ground	Power Ground
	8 CAN L	CAN 14	
	9 CAN H	CAN 06	
	10 N/C		
	11 Crank Return	Crank 02	
	12 Crank Signal	Crank 01	
	13 Switched 12V Supply	IF 02	
	14 Injector Drive A	Inj 1 02	Cylinder 1
	15 N/C		
	16 Rad Fan Relay Drive		
	17 Fuel Pump Relay Drive		
	18 Ignition Drive 2	Coil 03	Cylinder 2+3
	19 N/C		
	20 TPS Signal	TPS 02	
	21 Baro Signal	Baro B	
	22 5V Analogue	TPS 01	
	5V Analogue	Baro C	
	23 CAM Return	CAM 02	
	24 N/C		
	25 N/C		
	26 Injector Drive C	Inj 4 02	Cylinder 4
	27 N/C		
	28 N/C		
	29 Lambda Signal	WHITE/BLUE	
	30 CAM SIG	CAM 01	
	31		.
	32 Injector Drive B	Inj 3 02	Cylinder 3
	33 Coolant Gauge Drive	IF ??	PWM
	34 N/C		Tacho drive enligt Jerr
	35	Cail 04	Outlined and 4 + 4
	36 Ignition Drive 1	Coil 01	Cylinder 1+4

Coil 01

Name Symbol Manufacturer Part Number Comment	Crankshaft Sensor Crank		
Connections	From 1 2 Screen	To ECU 12 ECU 11 Ground	Crank Signal Crank Return
Name Symbol Manufacturer Part Number Comment	CAM Sensor CAM		
Connections	From 1 2 Screen	To ECU 30 ECU 23 Ground	CAM Signal CAM Return
Name Symbol Manufacturer Part Number Comment	Throttle Position Sensor TPS		
Connections	From ? ? ?	To ECU 22 ECU 05 ECU 20	5Va 0Va TPS Signal
Name Symbol Manufacturer Part Number Comment Connections	BARO Baro Delphi 1202 0403 Green fitted with pins From	То	
	A B C	ECU 05 ECU 21 ECU 22	0Va Baro Signal 5Va
Name Symbol Manufacturer Part Number Comment	Coolant Temp Sensor Coolant		
Connections	From 1 2	To ECU 02 ECU 05	
Name Symbol Manufacturer Part Number Comment	Air Temp Sensor AIR TEMP		
Connections	From 1 2	To ECU 05 ECU 03	

Name Symbol Manufacturer Part Number Comment	Lambda LAMBDA		
Connections	From	To ECU 29 ECU 05 IF 01 Ground	SIG OVA 12V GROUND
Name Symbol Manufacturer Part Number Comment	Injector 1 Inj 1		
Connections	From 1 2	To IF 01 ECU 14	
Name Symbol Manufacturer Part Number Comment	Injector 2 Inj 2		
Connections	From 1 2	To IF 01 ECU 01	
Name Symbol Manufacturer Part Number Comment	Injector 3 Inj 3		
Connections	From 1 2	To IF 01 ECU 32	
Name Symbol Manufacturer Part Number Comment	Injector 4 Inj 4		
Connections	From 1 2	To IF 01 ECU 26	

Name	Ignition Coil		
Symbol Manufacturer	Coil		
Part Number			
Comment			
Connections	From	То	
	1	ECU 36	
	2 3	IF 01	
	3	ECU 18	
Name	Interface		
Symbol	IF		
Manufacturer			
Part Number			
Comment	_		
Connections	From	То	
	1	INJ 1 01	BATT 12V
		INJ 2 01	BATT 12V
		INJ 3 01	BATT 12V
		INJ 4 01	BATT 12V
	2	COIL 02	BATT 12V
	2	ECU 13	IGN
	3	Lambda 12V	IGN
_	3	ECU 17	Fuel Pump Relay Drive
	4	ECU 33	Coolant Gauge Drive
Name	Ground		
Symbol	Ground		
- ,			

Manufacturer
Part Number
Comment
Connections
From
To
ECU 06
ECU 07
Crank Screen
Cam Screen
LAMBDA ORANGE/BLACK

 Name
 CAN Link

 Symbol
 CAN

 Manufacturer
 Delphi

 Part Number
 12110250

 Comment
 To

 6
 ECU 09

 14
 ECU 08

Optional Functions (ECU must be specifically built for some of these functions)
Fuel Pump Relay, Shift Light
Rad Fan, Shift Light
Vehicle Speed, Oil Temp, Gear Position, Oil Pressure, Fuel Pressure, Lauch Command, Beacon
Oil Temp, Gear Position, Oil Pressure, Fuel Pressure, Launch Command
Vehicle Speed, Oil Temp, Gear Position, Oil Pressure, Fuel Pressure, Lauch Command
Shift Light, Rad Fan Relay, Fuel Pump Relay